

## AUTOSLIDE ADAPTER FOR MOR/RYPDE INSTALL INSTRUCTIONS



1) Remove four 9/16-12 bolts with 13/16 socket.



2) Push restraining rods toward center of box.



3) Slide spacer blocks into channel.



4) Install bolt through hole.



5) Install and tighten nut (self locker) x 4.




6) Slide Hijacker skid pad (making sure wedge is to rear of box) into place.



7) Put plate in location using two 9/16-12" bolts opposite corners to hold plate.



8) Align opposite corners to restraining rods.

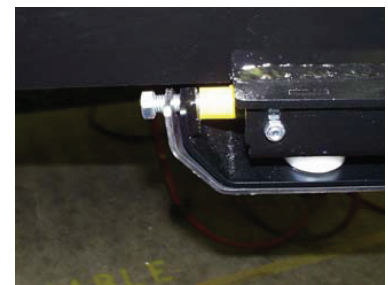

9) Align all 4 bolts before tightening.



10) Tighten all 4 bolts and torque to 85 ft-lbs.



11) Completed installation.

12) Locking plates on hitch head are not needed when using this kit. They can be extended all the way out or removed.