



## **Tools Needed To Assemble:**

Adjustable wrench, rubber mallet and needle nose pliers.

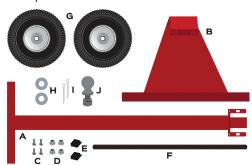

Part	Description	Qty.
Α	T-Handle	1
В	Yolk Assembly	1
С	Carriage Bolts 3/8"	4
D	Flange Nut	4
Е	Plastic Plug 1"	2
F	Solid Axle 3/4"	1
G	Flat-Free Wheel & Tire	2
Н	Washers 3/4"	2
I	Cotter Pins	2
J	Ball 2"	1

Thank you for purchasing the **MTD2FF Tongue Dolly**. For additional product information please visit **www.CroftTrailer.com**.

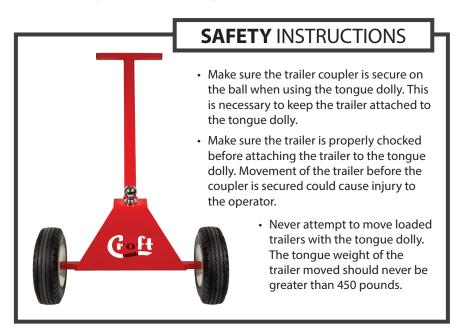

## **ASSEMBLY INSTRUCTIONS**



## Step 1.

Attach T-handle [**A**] to yolk assembly [**B**] with four 3/8" carriage bolts [**C**], four flange nuts [**D**]



Step 2.

Insert 3/4" axle [F] into axle sleeve on yolk assembly [B].



Step 3.

Install wheels [**G**] (long side of hub inward) with 3/4" flat washers [**H**] on the outside and secure with cotter pins [**I**].



Step 4.

Install 2" ball [J] to yolk assembly [B] through the hole and tighten securely.



Step 5.

Install plastic plugs [**E**] into T-handle [**A**]. Your **MTD2FF** is now ready to use.