



# TAIL LIGHT TENDER


**TLT3**



Thank you for purchasing a **Tail Light Tender** from Croft. For additional product information, please visit **CroftTrailer.com**.

## OPERATION

Current will only flow in direction of arrow (one direction) from BLACK input to GREEN, YELLOW, OR BROWN output.

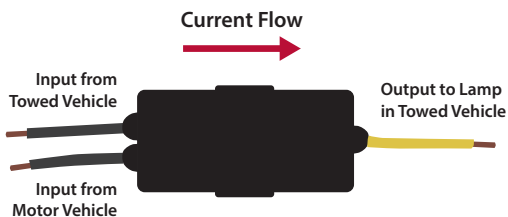

Typically, three Tail Light Tenders are installed in the towed (rear) vehicle. One on the right brake/turn, one on the left brake/turn, and one for the tail lights (running lights).

**CROFT TRAILER SUPPLY**

(800) 426-8159 | [www.CroftTrailer.com](http://www.CroftTrailer.com)

## INSTALLATION

1. Cut the left brake/turn wire a few inches behind red brake lamp of towed (rear) vehicle. Connect the YELLOW output of the **TLT3** to lamp side of wire just cut. Connect one of the BLACK inputs of **TLT3** to engine side of wire just cut. The other BLACK input is connected to the wire coming from the left brake/turn signal of the motor home.
2. Do the same for the right brake/turn (GREEN) side.
3. Do the same for the tail lights/running lights (BROWN).

NOTE: You should connect the tail light (BROWN) **TLT3** before the "Y" going to each tail light. If this is too difficult, consider using a 4th **TLT3** and install one next to each tail light.

---

*Towing a 3-light system vehicle?* On towed (rear) vehicles with amber turn signals, install **TLT3s** on the red brake lights (omitting the amber turn signals, as the red brake light will now act as a turn signal).

## CROFT TRAILER SUPPLY

(800) 426-8159 | [www.CroftTrailer.com](http://www.CroftTrailer.com)

Kansas City, MO  
(816) 483-7274

Olathe, KS  
(913) 780-1818

Lee's Summit, MO  
(816) 525-9355

Smithville, MO  
(816) 532-8900